


BEFORE DRIVING

Setting Mode

When the ignition mode is changed to “ON” by pressing the engine switch and the vehicle is stationary, you can enter the setting mode of the information display by pulling and holding the DISP switch (2) for more than 3 seconds.

- To select the setting that you want to change, pull the TRIP switch (3).
- To change the setting, pull the DISP switch (2).
- To exit the setting mode, select “Back” and pull the DISP switch (2).

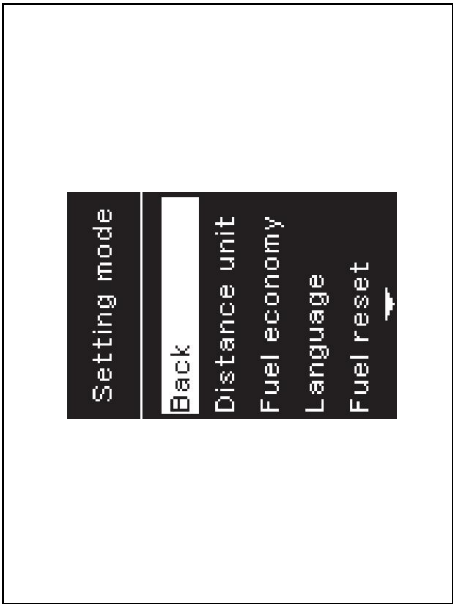

NOTE:

Current settings appear with reversed text and background colors.

NOTE:

- If you pull and hold the DISP switch (2) to enter the setting mode when the display (B) shows average fuel consumption or average speed, the value will be reset simultaneously. If you do not want to reset the value, pull the DISP switch quickly to switch the indication of the display.
- If you press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance units

You can change the units odo/trip meter distance is displayed in.

NOTE:

When you change the units odo/trip meter distance is displayed in, the trip meter will be reset automatically.

Fuel economy units

You can change the units that fuel consumption is displayed in.

Language

You can change the language of the information display.

Avg. fuel economy reset

You can change when the value of average fuel consumption is reset.

Temperature units

You can change the units that temperature is displayed in.

NOTE:

When you change the units that temperature is displayed in, the air conditioning system temperature display units will be changed automatically.

Foot lights

The foot lights can be programmed for interlocked operation with either lighting control or door operation and for no lighting.

Default setting

If you select “YES” and pull the DISP switch (2), all settings will be reinitialized.