

## Cooling System Refilling

**WARNING:**

**To avoid getting burned, do not remove cap while engine and radiator are still hot. Scalding fluid and steam can gush out under pressure if cap is taken off too soon.**

- 1) Fill reservoir (3) with coolant up to "FULL" level mark (1).
- 2) Install reservoir cap (2) on reservoir (3).



- 3) Fill radiator with coolant up to bottom of radiator filler neck (1) and install radiator cap.

**Recommended coolant**

**SUZUKI super long life coolant (coolant color: Blue)**

**Coolant specification**

**Freezing temperature: -36 °C (-33 °F)**

**Antifreeze / anti-corrosion coolant concentration: 50%**

**Coolant capacity**

**Engine, radiator and heater : 5.8 liters (12.26/10.21 US/Imp pt.)**

**Reservoir : 0.8 liters (1.69/1.41 US/Imp pt.)**

**Total : 6.6 liters (13.95/11.61 US/Imp pt.)**



- 4) Run engine at idle speed.

- 5)** Run engine until radiator fan motor is operated.
- 6)** Stop engine and wait until engine comes cooled down fully.
- 7)** Add coolant to radiator up to bottom of radiator filler neck, and install radiator cap.
- 8)** Repeat Step 4) through 7).
- 9)** Confirm that coolant level in reservoir is at "FULL" level mark. If coolant is insufficient, add coolant.
- 10)** Check cooling system for leakage. 