



For more detailed information, refer to the Kenwood instruction manual.  
Kenwood Customer Support – Call 1-800-KENWOOD



© 2010 AMERICAN SUZUKI MOTOR CORPORATION and  
KENWOOD USA Corp or its subsidiaries

**Kenwood U.S.A. Corporation**  
2201 E. Dominguez St.  
Long Beach, CA 90810  
  
1-800-KENWOOD  
[www.kenwoodusa.com](http://www.kenwoodusa.com)

## ▼ ENTERTAINMENT/NAVIGATION SYSTEM QUICK START GUIDE



**KENWOOD**  
Listen to the Future

**KENWOOD**  
Listen to the Future

## GETTING STARTED

The radio will take several seconds to power up.

- A** Select a specific source by pressing its icon. Keep in mind you must have the optional source connected to access it.
- B** The **NAV** Button will always take you to the Navigation screen. The **SRC** button will take you back to the source screen. For the **FNC** button, refer to the instruction manual.
- C** **SOURCE SELECT** icon: This icon toggles between viewing all the sources, or the three sources.
- D** **A/V SOURCE** icon: Selecting this will take you to your A/V SOURCE and controls.
- E** **AUDIO ADJUSTMENT MENU** icon: Press this to access your Audio Adjustments.
- F** **SRC SETUP** icon. Selecting this allows one to make adjustments to the receiver's setup.

Note: Video sources can only be viewed while the car is parked and the parking brake engaged.

## NAVIGATION

The opening screen asks **WHERE TO?** and **VIEW MAP**. If you selected **WHERE TO?**, you can select destination entry methods such as address or point of interest. If you selected **VIEW MAP**, the map display appears and shows your current location.

- G** Pressing the **GREEN BAR** will show all the turns in your navigation route.
- H** Pressing this button brings up the trip computer.
- I** The **MENU** button lets you access your tools and settings.

## HOW TO PLAY YOUR iPod

- J** Plug your iPod or iPhone® into the iPod cable found in the glove box.
- K** Choose iPod from the source screen.
- L** The receiver will begin playing the first song on your iPod. To change either music or video content, select either **MUSIC SEARCH** or **VIDEO SEARCH** at the bottom of the screen (if you don't see these commands, touch the arrow at the bottom left corner of the screen until these commands appear). You will be taken to the **LIST/SEARCH** screen. Choose a search criteria and browse your files using the arrows. The bar to the left represents the amount of music or video content on your iPod and you can touch the bar at any time to jump further into your search.
- M** Once you've made a selection, tab over to the control screen; this will display the music info. If playing a video, touch the album art in the top left corner to view the video.

Note: Video sources can only be viewed while the car is parked and the parking brake engaged.

### MAIN MENU



### NAVIGATION



### HOW TO PLAY YOUR iPod



#### WARNING

Interacting with the screen while driving could cause a crash and you or others may be seriously injured or killed.

- Keep your eyes and mind on the road.
- Use voice guidance directions whenever possible.

## SETTING UP YOUR PHONE FOR HANDS-FREE OPERATION



## BLUETOOTH

### Setting Up Your Phone for Hands-Free Operation

- N** Select **BLUETOOTH** from the menu of your phone. (usually found in Settings)
- O** Make sure that discover mode is enabled on the phone. Select **ADD NEW DEVICE**. (Make sure the phone is near the Kenwood Receiver). The phone should search and find the device which begins with the letters "DNX."t
- P** The phone will ask for a code which is "0000".

Note: Some phones may require you to select the "DNX" as a trusted device.

The phone should be connected at this time. If the phone is still not connected, repeat this process.

Once connected, the receiver will automatically download the phone book contained in your phone. This process might take a minute or so depending on how many phone numbers are programmed in your phone.

To see if your phone is compatible, check the Phone Compatibility List at: [www.kenwood.com/bt/support/143to160/eng.html](http://www.kenwood.com/bt/support/143to160/eng.html)

## MAKING AND TAKING HANDS-FREE CELL PHONE CALLS



### Making and Taking Hands-Free Cell Phone Calls

- Q** This button answers and makes calls. Like a Send/End button.
- R** This button can send and receive text messages. Note: Not many phones have this ability via Bluetooth and the car must be parked with the parking brake engaged to use this feature.
- S** This button displays your phone book.
- T** These buttons can be set to favorite numbers
- U** This button displays outgoing calls
- V** This button displays the incoming calls
- W** Voice tags can be set to dial via voice commands.

Note: The Phone book can only be viewed while the car is parked and the parking brake engaged.

## STEERING WHEEL CONTROLS



## STEERING WHEEL CONTROLS

- X** Vol +/- → Volume up/down
- Y** Seek ^/v → Seek up/down
- Z** Mute → Mute
- ZZ** Mode → changes all sources in a queued fashion

## SOUND SETTINGS

These are the recommended sound settings for vehicles equipped with the Rockford Fosgate Audio System. Please refer to the Audio Control section of the owners guide starting on page 59. These settings should be applied separately to each audio source:

Volume Offset		-10	
Loud		ON	
Speaker Setting (Front L&R)		Wide	
EQ Setting	Center Frequency	Level	Q
Bass	50Hz	8	1
DC Bass Ext	ON		
Mid	500Hz	1	1
Treble	17.5 kHz	3	N/A

#### WARNING

Interacting with the screen while driving could cause a crash and you or others may be seriously injured or killed.

- Avoid looking at the screen for too long.
- Stop the vehicle in a safe location before typing on the screen.