

2011

Kizashi

Maintenance Schedule

Severe Driving Conditions



Way of Life!

Maintenance Interval	Service
5,000 km or 3 months	A
10,000 km or 6 months	A + B + C
15,000 km or 9 months	A
20,000 km or 12 months	A + B + C
25,000 km or 15 months	A + D
30,000 km or 18 months	A + B
35,000 km or 21 months	A
40,000 km or 24 months	A + B + C
45,000 km or 27 months	A
50,000 km or 30 months	A + B + D + E
55,000 km or 33 months	A
60,000 km or 36 months	A + B + C
65,000 km or 39 months	A
70,000 km or 42 months	A + B
75,000 km or 45 months	A + D
80,000 km or 48 months	A + B + C
85,000 km or 51 months	A
90,000 km or 54 months	A + B
95,000 km or 57 months	A
100,000 km or 60 months	A + B + C + D + E + F
105,000 km or 63 months	A
110,000 km or 66 months	A + B
115,000 km or 69 months	A
120,000 km or 72 months	A + B + C
125,000 km or 75 months	A + D

NOTE

Maintenance interval based on time or mileage, whichever comes first.

"Inspect" denotes inspection, cleaning, adjustment, lubrication or replacement as required.

Replace Suzuki LLC Super Blue engine coolant at 150,000 km/90 months, and every 75,000 km or 45 months thereafter.

Replace EVAP canister every 250,000 km or 180 months.

Replace fuel filter every 250,000 km or 150 months.

SERVICE A

- ☐ Inspect air cleaner filter element (paved road)
- ☐ Change engine oil and oil filter

SERVICE B

- ☐ Inspect tires (including tire rotation)
- ☐ Inspect wheels
- ☐ Inspect suspension system
- ☐ Inspect propeller shafts (i-AWD)/Drive axle boots
- ☐ Inspect steering system (steering wheel movement, linkage)
- ☐ Inspect power steering
- ☐ Inspect all latches, hinges and locks
- ☐ Inspect air conditioner filter element (if equipped)

SERVICE C

- ☐ Inspect brake discs and pads (front, rear)
- ☐ Inspect brake hoses and pipes
- ☐ Inspect wheel bearings (not required at 10,000 km/3 months)
- ☐ In addition to the above, inspect parking brake lever and cable (lever movement check, adjustment) at the 10,000 km/6 month maintenance interval

SERVICE D

- ☐ Inspect cooling system hoses and connections
- ☐ Inspect exhaust pipes and mountings
- ☐ Inspect fuel tank and cap
- ☐ Inspect fuel lines and connections
- ☐ Inspect clutch (for manual transaxle) pedal and fluid level
- ☐ Brake fluid level check
- ☐ Brake pedal stroke check, adjustment
- ☐ Inspect parking brake lever and cable (lever movement check, adjustment)
- ☐ Inspect manual transaxle oil (Genuine Suzuki Gear Oil 75W-80)
- ☐ Change manual transaxle oil (other than Genuine Suzuki Gear Oil 75W-80)
- ☐ Inspect continuously variable transaxle (CVT) fluid level
- ☐ Continuously variable transaxle (CVT) fluid deterioration check
- ☐ Change transfer oil (i-AWD)
- ☐ Change rear differential oil (i-AWD)
- ☐ In addition to the above, change manual transaxle oil (Genuine Suzuki Gear Oil 75W-80) at the 75,000 km/45 month maintenance interval
- ☐ In addition to the above, inspect CVT fluid hose at the the 75,000 km/45 month maintenance interval

SERVICE E

- ☐ Drive belt (inspect for damage)
- ☐ Inspect ignition coil (plug cap)
- ☐ Change engine coolant (Suzuki LLC Standard Green, if installed)
- ☐ Change air cleaner filter element (paved road)
- ☐ Change air conditioner filter element (if equipped)

SERVICE F

- ☐ Inspect valve lash (clearance)
- ☐ Inspect emission related hoses and tubes
- ☐ Replace spark plugs
- ☐ Change brake fluid

