


BEFORE DRIVING

Trunk Lid Lock Switch (if equipped)

Internal Trunk Release

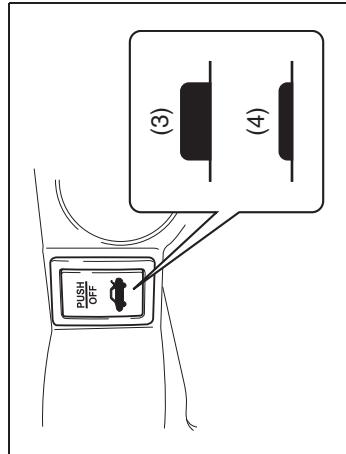


57121061
This switch is inside the glove box. If this switch is pushed to the down position, the trunk lid is locked and cannot be opened. Push the switch again to unlock the lid.

Keyless Start System Remote Controller

Keyless Start System Remote Controller

The remote controller enables the following operations:

- You can lock or unlock the doors by operating the LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch on the door handle. For details, refer to the explanation in this section.
- You can unlatch and let the trunk lid slightly open by pushing and holding the "TRUNK LID UNLOCK" button on the remote controller. Refer to the explanation in this section.

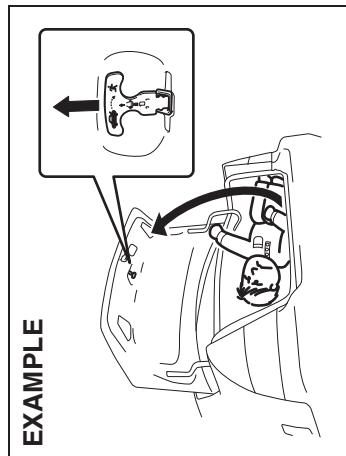

57121012
There is a release lever located inside the trunk, on the rear part of the trunk lid. This lever is for emergency use so that if a person, such as a child, gets trapped in the trunk compartment, he can exit the vehicle. The lever glows in the dark, after a brief exposure to ambient light, so it can be found easily. It is operated by pulling it in the direction of the arrow.

! WARNING

To help avoid situations where someone might get trapped in the trunk, keep your vehicle locked when unattended, and do not allow anyone to play in the trunk.