


INSPECTION AND MAINTENANCE

Bulb

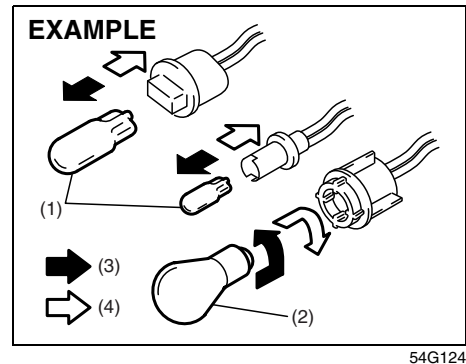

- (3) Removal
(4) Installation

There are two types of bulb, "Full glass type" (1) and "Glass/metal type" (2).


To remove and install a full glass type bulb (1), simply pull out or push in the bulb.

To remove a glass metal type bulb (2) from a bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

You can access the individual bulb or bulb holders as follows.


Front parking lights

- 1) Open the engine hood.

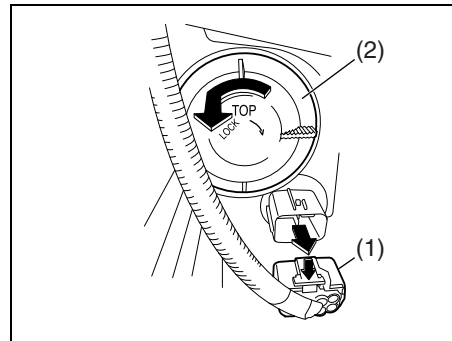

- 2) To create the space necessary for performing the steps that follow, disconnect the coupler (1) by pressing the claw.

- 3) Turn the cover (2) counterclockwise to remove it.

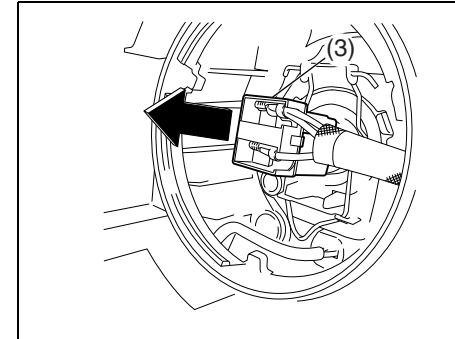

- 4) Disconnect the coupler (3).

