



The fuses are also located under the passenger's side of the dashboard. Remove the two screws and dashboard under cover. The amperage of each fuse is shown on the top of the dashboard under cover.

CAUTION

Remove the dashboard undercover while being careful not to damage the wiring fitted on it. If the wiring is damaged, the courtesy lights will not work.

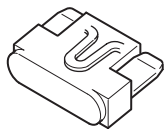

OK

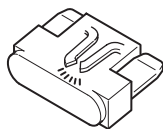

BLOWN

81A283

⚠ WARNING

Always be sure to replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by your SUZUKI dealer.

Headlight Aiming

Since special procedures are required, we recommend you take your vehicle to your SUZUKI dealer for headlight alignment.